

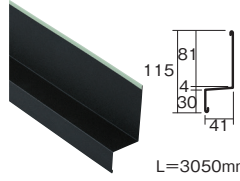
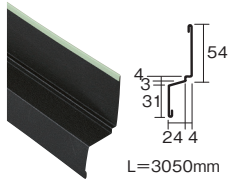





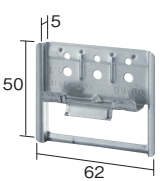
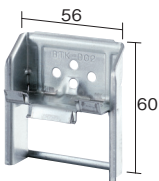






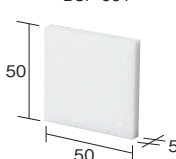
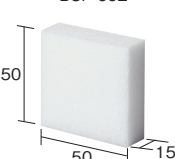
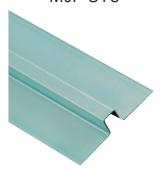
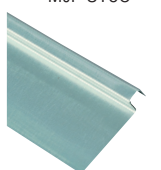
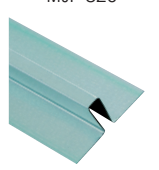
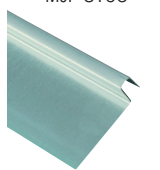






DRESSE Installation Hardware

<p>Waterproof sheet</p> <p>BST-002</p>  <p>W 1m × L 50m</p>	<p>Waterproof Tape</p> <p>BRT-005</p>  <p>t 0.5mm × W 50mm × L 20m or Equivalent quality of official products</p>	<p>Flashing</p> <p>Base/Joint Flashing</p> <p>BGK-F55□□□</p>  <p>L=3050mm</p> <p>BGK-F25□□□</p>  <p>L=3050mm</p> <p>Made of steel (0.35mm or more thickness) Secure official products, recommended products and same dimensions</p>			
<p>Starter</p>					
<p>Starter Strip for the Horizontal Furring Strips Installation Method</p> <p>BTK-G16</p>  <p>L=3030mm</p>	<p>Starter Strip for the Horizontal Ventilation Installation Method</p> <p>BTK-G17</p>  <p>L=3030mm</p>	<p>Starter Strip for the Vertical Furring Strips Installation Method</p> <p>BTK-A06</p>  <p>L=3030mm</p>	<p>Starter for the Vertical Furring Strips Installation Method</p> <p>BTK-D10</p>  <p>150</p>	<p>Starter for the Vertical Ventilation Installation Method</p> <p>BTK-D12</p>  <p>150</p>	
<p>Clip</p> <p>For the Furring Strips Installation Method</p> <p>BTKD01-N</p>  <p>50, 62, 5</p> <p>For the Ventilation Installation Method</p> <p>BTK-D02</p>  <p>56, 60</p> <p>For the Ventilation Installation Method</p> <p>BTK-G20</p>  <p>L=3019mm</p>		<p>Nail</p> <p>For Clipping the Siding</p> <p>BRNN□□□</p>  <p>45, 2.4, φ2.4×45mm</p> <p>BRNKH001</p>  <p>65, 3, φ3×65mm</p>		<p>Stainless Screw</p> <p>For Sticking the Clip</p> <p>BSBD001</p>  <p>7.9, 35, 4, φ4.0×35mm</p> <p>BSBJ001</p>  <p>19, 4, φ4.0×19mm</p> <p>For Clipping the Siding</p> <p>BSBL001</p>  <p>60, 5, 4.2, φ5×60mm</p>	
<p>Spacer</p> <p>For the Furring Strips Installation Method</p> <p>BSP-001</p>  <p>50, 50, 5</p> <p>For the Ventilation Installation Method</p> <p>BSP-002</p>  <p>50, 50, 15</p>		<p>Hat Joiner</p> <p>For the Furring Strips Installation Method</p> <p>MJF-810</p>  <p>20, 8, 20, 10, L=3030mm</p> <p>MJF-810C</p>  <p>40, 8, 10, L=2000mm</p> <p>For the Ventilation Installation Method</p> <p>MJF-820</p>  <p>20.5, 8, 20.5, 20, L=3030mm</p> <p>MJF-816C</p>  <p>49, 8, 16, L=2000mm</p>			
<p>Panel Corners</p> <p>For Horizontal Method</p> <p>ORA△△△T□□□R(V) OUA△△△T□□□R ORA△△△S□□□R(V) OUA△△△S□□□R</p>  <p>L=455mm</p> <p>For Vertical Method</p> <p>ORA△△△L□□□R(V) OUA△△△C□□□R</p>  <p>L=3030mm</p>		<p>Sealant</p> <p>SR Seal H100-S70</p> 	<p>Repairing Putty</p> <p>BHP-007</p> 	<p>Touch-up Paint</p> <p>BHY□□□□ BHW□□□□</p> 